

# Xiamen Rizheng Industry Co.,Ltd

## Keychain Stylus Pen Kits Assembly Instructions

### Required Accessories:


- 7mm Pen Mandrel
- Drill Bit: 7mm RZ-DB007
- Bushing set(2 pc) RZ-BPTS222#-BU
- Barrel Trimming set RZ-PM011
- Glue (Thick CA or Epoxy)



### Preparing the Blank:

- Cut a blank to the length of the tube and add 1/16" for squaring off.
- Drill a 7mm hole lengthwise through the blank.
- Spread glue over the tube, insert into the blank with a twisting motion to spread the glue evenly inside.
- Center the tube lengthwise inside the blanks.
- When the glue is dry, square the ends of the blank. Use a 7mm barrel trimmer. Take the excess material down flush with the ends of the brass tube. (do not trim beyond the length of the tube since this may interfere with the assembly).


### Diagram A

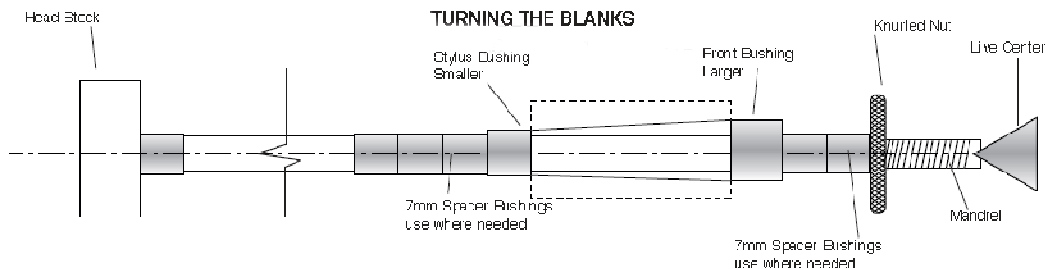

### Turning the Blank

- Mount the bushings and blanks according to diagram A.
- Thread on the knurled nut and hand tighten to hold all components in place.
- Slide the tailstock up snugly against the mandrel shaft inserting the live center point into the mandrel dimple, lock in place.
- Hand tighten the quill adjustment to firm up the mandrel. (DO NOT overtighten, it could damage the mandrel.)
- Using sharp tools, turn the blank down close to the bushing diameter. Turn the barrel (straight or to a profile of your choice)
- Sand the blank down to be flush with the bushings gradually increasing the sandpaper grits.
- Finish the barrel with your choice of polish. Allow sufficient time for the polish to cure.

Diagram B

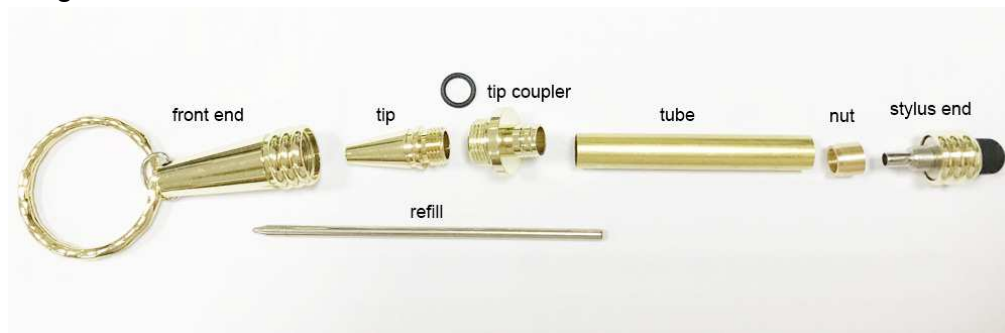

## Assembly

- Layout parts according to diagram B
- Press the tip coupler, recessed end in first into the wider end of the barrel.
- Press the nut, recessed end in first into the opening at the opposite end of the barrel.
- Insert the refill into the opening at the stylus end, to bottom. Screw into the stylus nut.
- Screw the tip over the tip coupler.
- Screw the front end over the tip.