

Xiamen Rizheng Industry Co.,Ltd


Chrome Ice Cream Scoop Kits

Required Accessories

- 1.5" x 1.5" x 5.5" (or similar) blank
- CA (cyanoacrylate) glue or two-part fast-drying epoxy
- Sanding supplies and finish




Turning the Blank

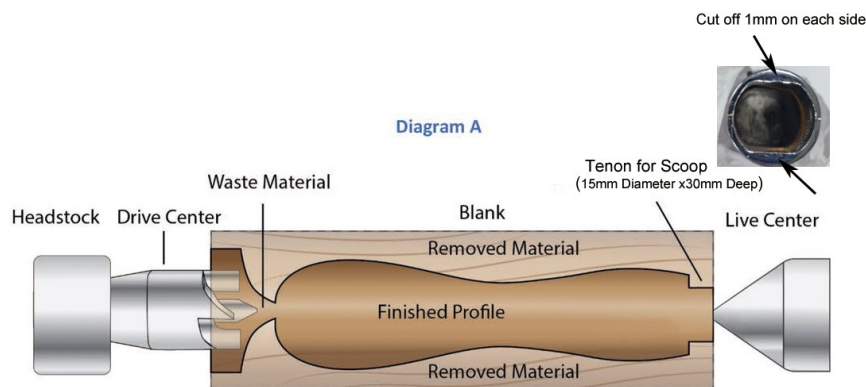

1. Mount the blank between a drive center and live center
2. Turn down the blank to the desired shape using lathe chisels. Leave $\frac{1}{2}$ " waste material on the drive center end. Cut a Tenon on the end about 15mm in diameter and 30mm deep for the Scoop as shown in Diagram A, then cut off 1mm on each side to insert the hole of scoop better, just same the top right picture shown.
3. Finish with sanding (wet or dry) and choice of polish
4. Trim off $\frac{1}{2}$ " waste material with lathe or bandsaw and finish end with sanding and polish

Assembly

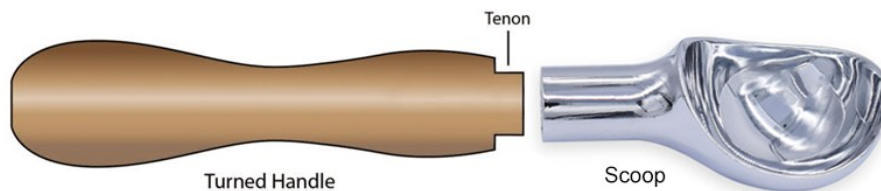

Put a small amount of glue on the Tenon and inside the Scoop. Then insert the tenon into the scoop.