

Xiamen Rizheng Industry Co.,Ltd

CN Lake Bullet Fountain Pen Kits Assembly Instructions


Required Accessories

- 7mm pen mandrel
- 4-piece Bushing Set RZ-RP379#-BU
- Drill Bit 12.3mm RZ-DB123 and 10.6mm RZ-DB106
- Live Tailstock Center
- Glue (Thick CA or Epoxy)



Preparing the Blank

- Cut 2 blank to the length of the tube and add 1/16" for squaring off.
- Drill a centered hole lengthwise through each blank.
Upper blank (shorter tube)—drill a 12.3mm hole through.
Lower blank (longer tube)—drill a 10.6mm hole through
- Spread glue over the tube; insert the blank with a twisting motion to spread the glue evenly inside.
- Center the tube lengthwise inside the blank.
- When the glue is dry, square the ends of the blank. Use a barrel trimmer, or a universal pen blank squaring jig with a power disc sander. Take the excess material down flush with the ends of the brass tube. (Do not trim beyond the length of the tube since this may interfere with operation of the mechanism and assembly). Use a barrel trimmer to clean the inside of the tube.

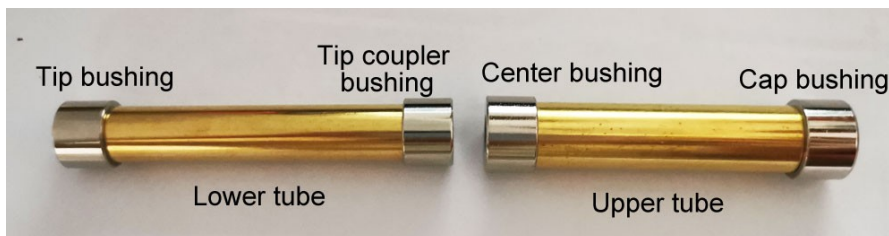

Turning the Blank

- Mount the bushings and blank according the diagram above.
- Thread on the knurled nut and hand tighten to hold all components in place.
- Slide the tailstock up snugly against the mandrel shaft inserting the live center point into the mandrel dimple, lock in place.
- Hand tighten the quill adjustment to firm up the mandrel. (DO NOT overtighten, it could damage the mandrel.
- Using sharp tools, turn the blank down close to the bushing diameter. Turn the barrel (straight or to a profile of your choice)
- Sand the blank down to be flush with the bushings gradually increasing the sandpaper grits.
- Finish the barrel with your choice of polish. Allow sufficient time for the polish to cure.

Diagram A



Assembly

- Arrange parts according to Diagram A.
- Press the Center band into one end of the Upper tube(shorter tube).
- Press the Clip & Cap assembly into the other end of the Upper tube(shorter tube).
- Press the Tip coupler into one end of the Lower tube(longer tube).
- Thread the end cap into the coupler, then press the end cap assembly into the other end of the Lower tube(longer tube).
- Attach the piston-type converters to the back of the fountain nib, then thread the Fountain nib into the tip coupler.
- The fountain pen is ready to operate.