

# Xiamen Rizheng Industry Co.,Ltd


## Toothbrush Handle Kit Assembly Instructions

### Required Accessories

- 7mm Pen Mandrel
- 7mm drill bit RZ-DB007
- 2 pc. bushings set RZ-PK170#-BU
- 7mm barrel trimmer RZ-PM011
- 2-part epoxy glue or insta-cure (cyanoacrylate) glue

### Preparing the Blank


- Cut a blank of 3/4" square to the length of the brass tube. Add 1/16" for squaring off.
- Drill a 7mm hole through the blank.
- Spread glue over the tube, insert into the blank with a twisting motion to spread the glue evenly inside.
- When the glue dries, use a 7mm barrel trimmer to square the ends of the blank. Take the wood flush with the brass tube.

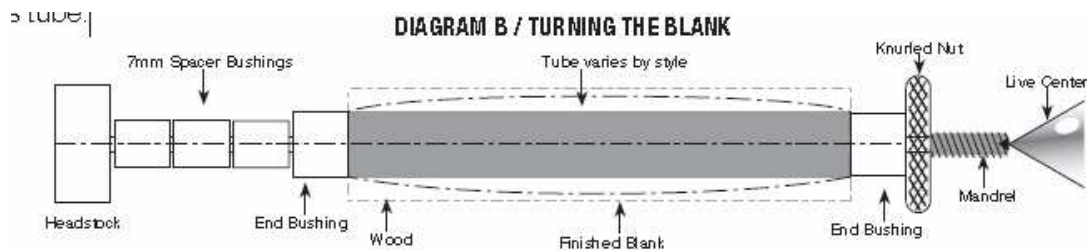

### Turning The Blank

- Mount the bushings and blank onto the mandrel according to diagram B.
- Turn and the wood down to the bushings.
- Finish the wood with water proof sealer .

### Diagram A

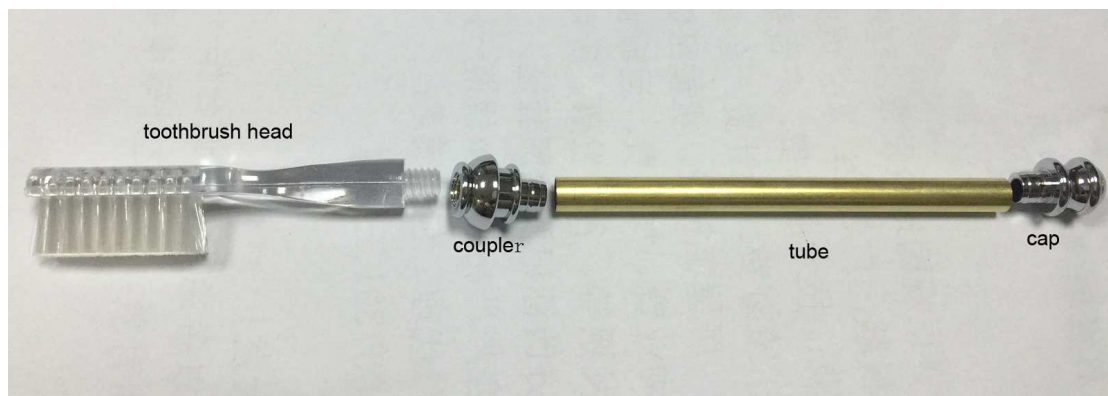

## **Assembly**

Layout Finished parts according to diagram 'A'

- Press the coupler into either end of the turned barrel.
- Press the cap into the opposite end of the barrel.
- Screw the toothbrush head into the coupler, tight.